


# Remote Status Light (Optional)

The Remote Status Light mounts on the cargo box for easy viewing of the unit's mode. The remote light indicates operating status as follows:

**Green status light:** Illuminates the “T” portion of the TK logo when the unit is functioning properly with no alarm codes.

**Amber status light:** Illuminates the “K” portion of the TK logo when the unit has a check alarm code, but is still functioning properly. Check the unit as soon as possible to correct the alarm condition.

**Flashing amber status light:** The “T” (in green) and the “K” (in amber) are illuminated and blinking when the unit has a shutdown alarm code and the load integrity is at risk. Correct the alarm condition immediately.

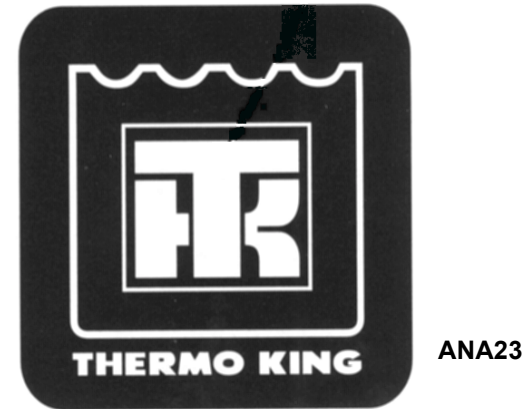

**Figure 24: Remote Status Light**