



Electromechanical cold controls for refrigerators and freezers

Electromechanical cold controls for refrigerators and freezers



Introduction

Danfoss Appliance Controls with its headquarters based in Denmark, and manufacturing sites in Wuqing-China and Zlaté Moravce-Slovakia, is the oldest and most experienced manufacturer of mechanical thermostats in the world. With over 60 years of experience and more than 340mill produced items, places Danfoss in a position as the only consecutive player on the current market.

Through extensive product and process development over the last 25 years Danfoss has developed highly automated production facilities ensuring homogeneous products with high quality standards, being considered the bench mark within its business segment.

Danfoss Appliance Controls is best characterized as a stand alone business unit, meaning that the organization has full global business responsibility across regions, no need for multiple contact persons or confirmation steps, we value our customers and are able to set-up the right team to meet their needs.

Application – Function description	page	4	▶
Type description	page	7	▶
Data – Design	page	12	▶
Approvals – Dimensions – Adjustment – Testing	page	13	▶
Thermostat selection – Accessories	page	14	▶
Standard range of thermostats	page	15	▶

Application

Thermostat 077b is used to control the temperature in refrigerators, upright and chest freezers, liquid coolers, bottle coolers and small commercial refrigeration appliances. The thermostat can be used as an evaporator thermostat or a room thermostat.

The thermostats are available with normal function, fixed cut-in and cut-out temperature, constant or variable cut-in temperature for automatic defrost, and with a push button for semi-automatic defrost.

The thermostats can be supplied with the following supplementary functions:

- Auxiliary contact
- Change-over contact
- Signal contact
- Signal contact + series contact
- Signal contact + super freeze-function and indication of same
- Enclosed Brake Device contacts for appliances charged with flammable refrigerants
- Low torque spindle stop turn.

All thermostats have NC (Normally closed) main contacts; i.e. they cut out the compressor current circuit on decreasing temperature.

- Cut-out temperature for variable cold controls ranges from 5°-20°C and 0°C for constant ones (range is defined as the interval between cut-out temperature in position cold and warm)
- Differential of normal function thermostat is between 4°C and 15°C and from 3°C with fixed setting, all in position warm (*Differential is interval between cut-in and cut-out temperature*).
- Differential of automatic defrost thermostat, with constant or variable cut-in above 0°C is between 10.5°C and 40°C in position warm. (*Differential is interval between cut-in and cut-out temperature*).
- With automatic defrost the cut-out temperature ranges between -5°C and -42°C, the cut-in temperature between +1°C and +11°C.
- Other temperature settings can be supplied by arrangement.
- 6.3x0.8 mm, 4.8x0.8 mm or a combination of above dimensions of terminals.
- Wide range with various extra functions and accessories.
- Approved by recognised authorities .

Function description

General

Danfoss 077B thermostats are designed for temperature control in refrigerators and freezers.

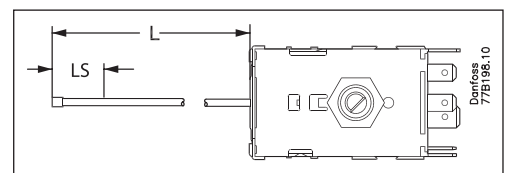
The thermostat regulates by cutting off or cutting in current to the compressor. Depending on the temperature registered by the thermostat sensor, the thermostat controls the compressor by powering it (cut-in) or depowering it (cut-off). The thermostat can be used either as an evaporator thermostat or a room thermostat.

"LS" for further details please contact danfoss. the thermostat body must not be exposed to condensate or defrost water.

Mounting

To ensure the best function, it is important to ensure that the sensor (capillary tube end) makes good contact with the evaporator; or, in room thermostat applications, with the airflow. The sensor must always be placed colder than the remaining section of the capillary tube and the thermostat itself. To secure trouble-free operation, Danfoss provides the

customer with a thermostat drawing (dimension sketch), specifying among other things the recommended sensor mounting length "LS". For further details, please contact Danfoss. The thermostat body must not be exposed to condensate or defrost water.



Operation

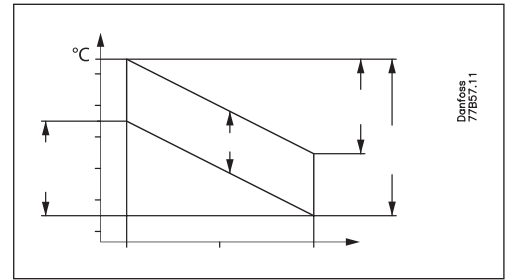
On thermostats with a spindle, the temperature is adjusted to cold by turning it clockwise (from warm towards cold position). Both cut-out and cut-in temperatures can be changed by turning the spindle, except on types 077b6, 077b62 and 077b63, where only the cut-out temperature can be changed in this way.

The thermostats can be supplied with or without stop. The stop function cuts the main power supply to the heater and, for example, the heating element.


Function

All normal function thermostats have a cut-out temperature range and a cut-in temperature range.

The differential is defined as the difference between cut-in and cut-out temperatures. However, the temperature settings of fixed function thermostats are non-adjustable.



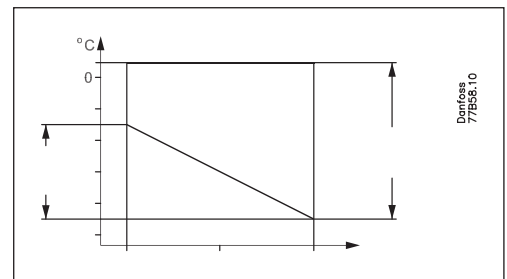On thermostats with constant cut-in temperature, B6 type, the terms “differential” and “cut-in temperature range” do not apply. The only relevant terms are “cut-out temperature range” and “temperature interval”.



The thermostats can be divided up into the following main types:

1. Thermostat with normal function, type 077B0.
2. Thermostat with signal function, type 077B2/077B3.
3. Thermostat with signal function and series stop contact, type 077B25.
4. Thermostat with contact for indication of super function and signal contact, cutting in on rising temperature, type 077B26.
5. Thermostat with push button defrost and automatic reset, type 077B4.
6. Refrigerator thermostat with automatic defrost and variable cut-in temperature, type 077B5.
7. Refrigerator thermostat with automatic defrost and constant cut-in temperature, type 077B6.

Danfoss type 077B mechanical cold controls

Main type	Functionality description
B0	Without additional functionality
B02	With auxiliary contact
B025	With fixed settings and changeover contact (reversing switch)
B04	With changeover contact
B045	With fixed settings
B2	With signal contact, cutting in on rising temperature
B24	With fixed settings and signal contact, cutting in on rising temperature
B25	With serial stop contact and signal contact, cutting in on rising temperature
B26	With super function contact, signal ad indication contact, cutting in on rising temperature
B3	With signal contact, cutting out on rising temperature
B34	With fixed settings and signal contact, cutting out on rising temperature
B4	With push button defrost
B5	With large differential and automatic defrost
B52	With large differential, automatic defrost and auxiliary contact
B53	With large differential, automatic defrost and changeover contact
B6	With constant cut-in temperature and automatic defrost
B62	With constant cut-in temperature, automatic defrost and auxiliary contact
B63	With constant cut-in temperature, automatic defrost and changeover contact

Function description

The auxiliary contact cuts out when the spindle is turned to position "stop" (0). The auxiliary contact can be used to cut out a heating element, for example, also in line with the main switch. The contact withstands 6/36A or 8/40A (FLA/LRA).

The signal contact is used to set off an alarm (audible or visual) when the sensor temperature exceeds 3-5°C of the cut-in one. The signal contact withstands a max. load of 0,1 A NI (Resistive).

The reversing switch (changeover contact) is mainly used to control 3/2-way solenoid valves in dual temperature cabinets. The changeover contact withstands a max. load of 0.5 A NI (resistive) or 0.1 A (inductive).

The series contact cuts out when the spindle is turned to position "stop". Both the main and signal contacts are cut out. The series contact withstands a max. load of 6/36 A or 8/40 A (FLA/LRA).

The super function contact cuts in when the spindle is turned to position "super". The compressor runtime is consequently unlimited. The super function contact withstands a max. load of 0.1 A NI (resistive).

Thermostats with fixed settings are assembled without a spindle: the temperature range is not adjustable.

Danfoss B4 type thermostats are used for semi-automatic defrost fridges; a push-button is used to manually activate a singular defrost cycle.

Refrigerator thermostats with a cut-in temperature between +2°C and +11°C are used in automatic defrost systems. The evaporator de-ices during every compressor stop time.

Thermostats with the Danfoss Enclosed Brake Device (EBD) are being assembled inside household appliances charged with flammable refrigerants such as R600a (isobutene) or R290 (propane) to prevent explosions due to leakage.

Thermostats with low torque spindle stop turn meet applications where a reduced turn off torque is required (max. 0.3 Nm at 26°C). The feature is only available in thermostats with serial connected auxiliary contacts. For further details, please contact Danfoss.

Performance

Danfoss electromechanical cold controls are designed to operate at least 300,000 cycles at full load (6/36 A and 8/50 A, respectively); internal quality audits reinforced product performance by metering over 1,000,000 cycles. Cut-out temperature setting drifts should be anticipated.

Safety backup control (Redundant thermostat) Danfoss electromechanical cold controls are designed for fridges and freezers in household- and light commercial appliances. Within the high-price food sector, Danfoss recommends protecting comestible goods by operating appliances with a built-in safety backup control or Danfoss electronic thermostats.

For more information, please contact Danfoss.

Type description

Function	Operation mode
	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Type B0 Cold control without extra functionality</p> </div> <div style="text-align: center;"> <p>Type B02 With auxiliary contact</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="text-align: center;"> <p>Type B04 With change-over contact</p> </div> <div style="text-align: center;"> <p>Type B02 With auxiliary contact</p> </div> </div>

Current marking

Type	Contact	Europe			USA/Canada		
		V AC	FLA	LRA	V AC	FLA	LRA
B0	3-4	6	(6) A	250 V	240	6	36
B02	3-4	6	(6) A	250 V	240	6	36
	3-6	6	(6) A	250 V	240	6	36
B04	3-4	6	(6) A	250 V	240	6	36
	3-6	0.5	0.1 A	250 V	240	0.5 A	NI

Function	Operation mode
	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Type B045 Fixed setting</p> </div> <div style="text-align: center;"> <p>Type B025 Fixed setting with change-over contact</p> </div> </div>

Current marking

Type	Contact	Europe			USA/Canada		
		V AC	FLA	LRA	V AC	FLA	LRA
B045	3-4	6	(6) A	250 V	240	6	36
B025	3-4	6	(6) A	250 V	240	6	36
	3-6	0.5	(0.1) A	250 V	240	0.5 A	NI

Type description

Function	Operation mode
<p style="text-align: right; font-size: small;">Danfoss A77B8.1.0</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Type B20 With signal contact that cuts in on rising temperature</p> <p style="font-size: x-small;">Danfoss 90U27.1.1</p> </div> <div style="text-align: center;"> <p>Type B26 With super-function, signal and indication contact, cutting in on rising temperature</p> <p style="font-size: x-small;">Danfoss A90U28.1.1</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="text-align: center;"> <p>Type B25 With serial stop contact and signal contact, cutting in on rising temperature</p> <p style="font-size: x-small;">Danfoss A90U28.1.1</p> </div> <div style="text-align: center;"> <p>Type B02 With signal contact, cutting out on rising temperature</p> <p style="font-size: x-small;">Danfoss 90U30.1.1</p> </div> </div>

Current marking

Type	Contact	Europe			USA/Canada		
		V AC	FLA	LRA	V AC	FLA	LRA
B2	3-4	6	(6) A	250 V	240	6	36
	3-6	6	0.1 A	250 V	240	0.1 A	NI
B25	3-4	6	(6) A	250 V	240	6	36
	3-6	6	0.1 A	250 V	240	0.1 A	NI
	8-3	6	(6) A	250 V	240	6	36
B26	3-4	6	(6) A	250 V	240	6	36
	3-6	6	0.1 A	250 V	240	0.1 A	NI
	3-8	6	0.1 A	250 V	240	0.1 A	NI
B3	3-4	6	(6) A	250 V	240	6	36
	3-6	6	0.1 A	250 V	240	0.1 A	NI

Type description

Function	Operation mode
<p>Danfoss A77B62.10</p>	<p>Danfoss 90U27.11</p> <p>Type B24 With fixed settings and signal contact, cutting in on rising temperature</p> <p>Danfoss 90U30.11</p> <p>Type B34 Fixed setting with signal contact that cuts out on rising temperature</p>

Current marking






Type	Contact	Europe			USA/Canada		
		V AC	FLA	LRA	V AC	FLA	LRA
B24	3-4	6	(6) A	250 V	240	6	36
	3-6		0.1 A	250 V	240	0.1 A	NI
B34	3-4	6	(6) A	250 V	240	6	36
	3-6		0.1 A	250 V	240	0.1 A	NI

Function	Operation mode
<p>Danfoss A77B63.10.12.03</p>	<p>Danfoss 90U31.10</p> <p>Type B4 With push button defrost</p>






Current marking

Type	Contact	Europe			USA/Canada		
		V AC	FLA	LRA	V AC	FLA	LRA
B4	3-4	6	(6) A	250 V	240	6	36

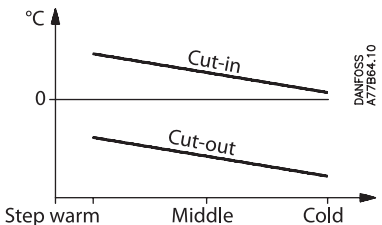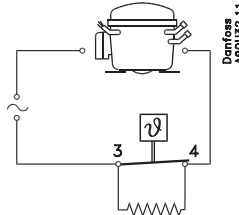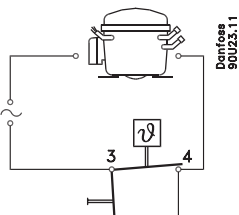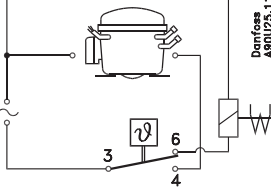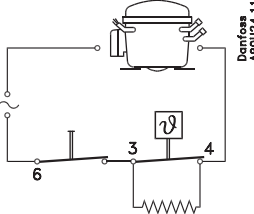Type description

Function	Operation mode							
 <p>DANFOSS A77B84.10</p>	 <p>Danfoss A80U32.11</p>		 <p>Danfoss 90U25.11</p>		<p>Type B5 With large differential and defrost</p>  <p>Danfoss A80U25.11</p> <p>Type B53 With large differential, automatic defrost and changeover contact</p>		<p>Type B52 With large differential, automatic defrost and auxiliary contact</p>  <p>Danfoss A90U24.11</p> <p>Type B52 With large differential, automatic defrost and auxiliary contact</p>	
Current marking								
Type	Contact	Europe			USA/Canada			
B5	3-4	6	(6) A	250 V	240	6	36	
B52	3-4	6	(6) A	250 V	240	6	36	
	3-6	6	(6) A	250 V	240	6	36	
B53	3-4	6	(6) A	250 V	240	6	36	
	3-6	0.5	(0.1) A	250 V	240	0.5 A	NI	

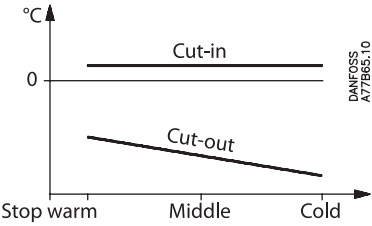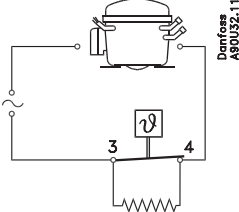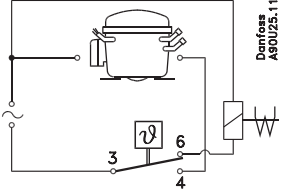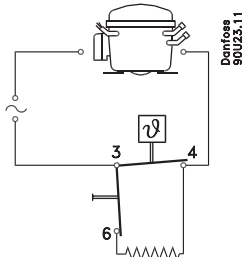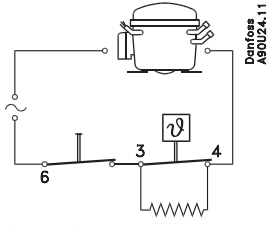Type description

Function	Operation mode	
 <p style="text-align: right; font-size: small;">DANFOSS A77B65.10</p>	 <p>Type B6 With constant cut-in temperature and automatic defrost</p>  <p>Type B63 With constant cut-in temperature, automatic defrost and change-over contact</p>	 <p>Type B62 With constant cut-in temperature, automatic defrost and auxiliary contact</p>  <p>Type B62 With constant cut-in temperature, automatic defrost and auxiliary contact</p>


Current marking

Type	Contact	Europe			USA/Canada		
		6	(6) A	250 V	V AC	FLA	LRA
B6	3-4	6	(6) A	250 V	240	6	36
B62	3-4	6	(6) A	250 V	240	6	36
	3-6	6	(6) A	250 V	240	6	36
B63	3-4	6	(6) A	250 V	240	6	36
	3-6	0.5	(0.1) A	250 V	240	0.5 A	NI

Data – Design

Technical data

Temperature interval	-42°C → +11°C
Cut-out temperature range	5°C → 20°C
Differential	3°C → 40°C (depending on spindle position and type)
Constant cut-in temperature	+2°C → +11°C (type 077B6 only)
Signal temperature	From 3°C → 5°C higher than cut-in temperature
Barometric pressure	As default 760 mm Hg (1013 hPa), others on demand
Mounting	To be mounted with nut or bracket (clip)
Connection terminal	6.3×0.8 mm, 4.8×0.8 mm, or any combination of both
Capillary tube length	Standard lengths: 0.8 m, 1.0 m, 1.2 m Customized lengths: 0.3 m → 2.9 m PE coated tube: 0.3 m → 2.3 m Longer lengths by arrangement with Danfoss
Ambient temperature	-25°C → +65°C
Humidity	<90% RH (non-condensing)
Weight	For capillary tubes longer than 2.3 m please contact Danfoss

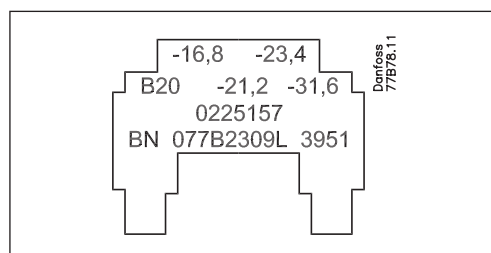

Deviant barometric pressure adjustment can be provided in accordance with customer requirements. An optional PE coating offers capillary tube protection where requested. In case of risking the thermostat body's placement at a colder spot than the sensor dip's, an optional built-in heating element can be supplied. The code number is stamped on the thermo-

stat. If required, the thermostat can be supplied stamped with the Danfoss customer code number as well as cut-in and cut-out temperatures in positions "warm" and "cold".

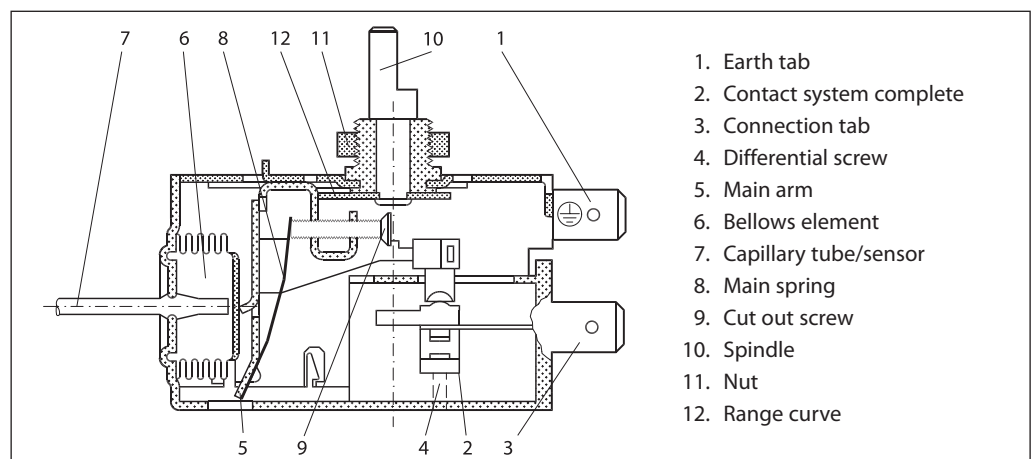
The first row indicates the thermostat's cut-in temperature in positions "warm" and "cold".

The second row indicates the Danfoss thermostat type and cut-out temperatures in positions "warm" and "cold".

The third row indicates the customer code (optional).

The fourth row provides the Danfoss process code, code number and production week/year/batch information.

Design details



Approvals – Dimensions – Adjustment – Testing

Approvals

Electromechanical cold controls are generally classified as individual components, also when assembled in refrigeration appliances. Hence some regional authorities stipulate cold controls to be subject to an individual approval. All

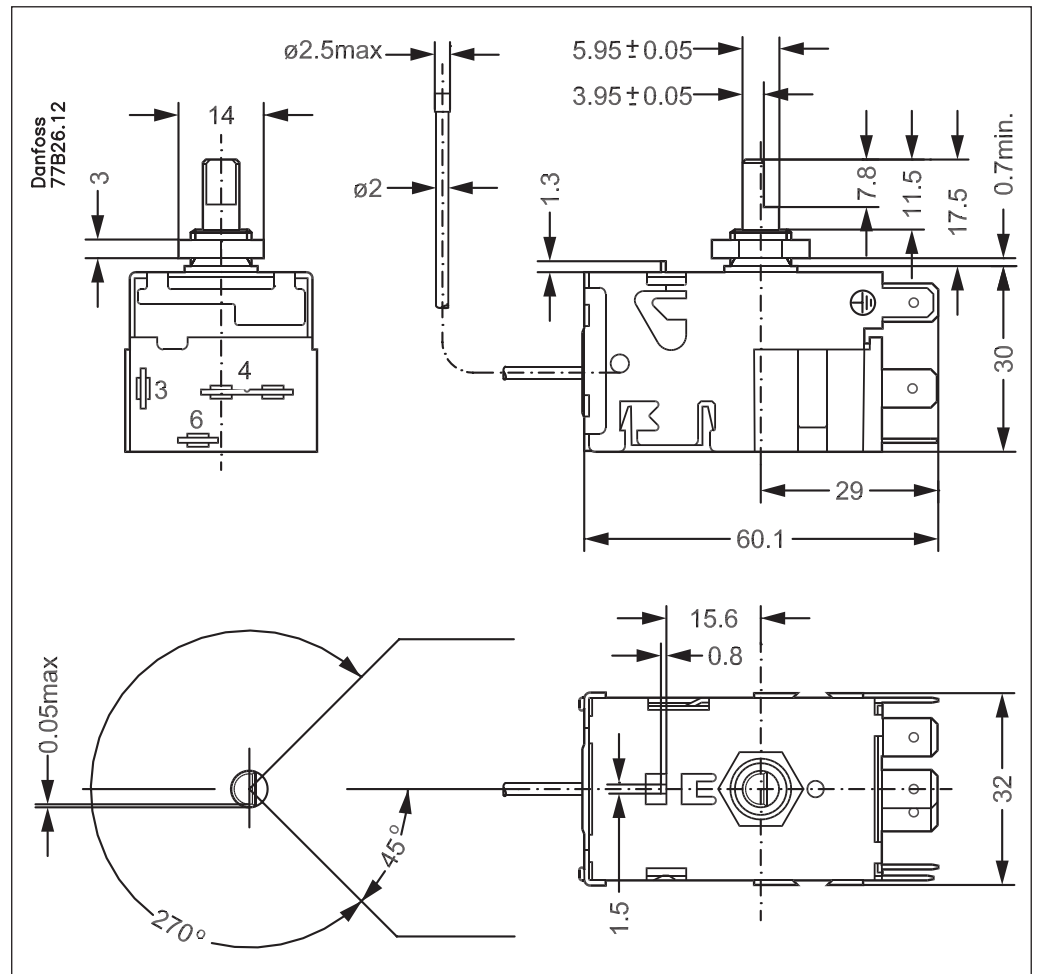
Danfoss electromechanical cold controls were approved by the following authorities:

BEAB in Europe

UL in USA

CSA in Canada

Dimensions



Testing

All Danfoss electromechanical cold controls pass multiple hardware and operational tests to ensure that cut-in and cut-out temperatures are properly adjusted. A danfoss test certificate may be provided free of charge.

tures are mapped with the controls shutting and opening the main contact respectively. To enhance the performance of the controls, this process is performed twice and only the second reading applies.

To ensure sustained control precision, the submerged part of the sensor (LS) is cooled down/heated up at speed of only 0.5 ±0.1 °C/minute. Both cut-in and cut-out tempera-

When evaluating temperature settings, the barometric pressure discussed above has to be taken into consideration.

Thermostat selection – Accessories

Signal contact adjustment

The cold control adjustment bath is continuously heated up to a temperature higher than the main contact's cut-in value, until the control cuts out. The first reading of the mapped bath temperature applies.

Semi-automatic reading

During the control's adjustment bath, the defrost push-button is pressed throughout if the sensor temperature ranges between the cut-in and cut-out values. The bath is on-ward-heated until the control cuts in. The first reading of the mapped bath temperature applies.

Thermostat selection

When selecting a thermostat, the following three factors must be taken into consideration:

1. The temperature conditions in the refrigeration appliance.
2. Pressure equalisation during standstill periods.
3. Compressor capacity utilisation.

Satisfactory conditions can be achieved by observing the following guidelines:

The thermostat range determines the temperature level in the refrigerator or freezer. The range selection has to be consistent with avoidance of short operating times in "warm" position.

With the thermostat in "cold" position, in high ambient temperatures and under high load, the thermostat cut-out function must remain operational. This can be achieved by setting the cut-out temperature about 2°C higher in relation to the temperature that can be reached. In case a permanent compressor run time is required in "cold" position, the cut-out point should be set 2°C colder than the temperature that can be reached.

In general, a cut-out temperature interval of 10°C is suitable for most refrigerators and freezers. The differential should exceed a minimum range to secure the refrigeration system's full pressure equalisation; otherwise, the restart of e.g. compressors equipped with LST starting devices may be impeded.

The experience-based Danfoss recommendations given below indicate some appliance-specific minimum differentials in position "warm":

Refrigerators	8-10°C
Chest freezers	8-10°C
Upright freezers	5-7°C
Liquid and bottle coolers	approx. 4°C

In order to find the best cold control variant, multiple appliance tests need to be performed. Danfoss provides its customers with valuable application notes providing, for example, relevant information on sensor and cold control placement. For further information, please contact Danfoss.

Accessories

Danfoss offers a wide range of different accessories in various colours, including items like dial plates, washers and knobs. For more information, please refer to Danfoss publication No. DD.43.A1.02 or contact your local Danfoss dealer.

Standard range of thermostats

Applica- tion Code number	Function	Temperature °C at 760 mm Hg					Capil- lary type length
		Thermostat position			Signal	Defrost	
		Warm Cut-in/ Cut-out	Middle Cut-in/ Cut-out	Cold Cut-in/ Cut-out			

Refrigerators

077B0020	Without extra functionality	+3.5/-3*	0/-7	-5.4/-12			1.0
077B0021	Without extra functionality	-2/-11*	-5.5/-15	-10/-20.5			1.0
077B0022	Without extra functionality	-8/-16*	-11/-20	-15.5/-25.5			1.0
077B0023	Without extra functionality	-10.5/-16*	-14/-20	-19.5/-26			1.0
077B0033	Without extra functionality	+2.5/-5*		-13.5/-24.5			1.2
077B4047	With push button defrost (No. 2)	-4/-13*	-7/-17	-11/-22		+6	1.0

Chest freezers

077B0024	Without extra functionality	-13/-21*	-16/-25	-20.5/-30			0.8
077B0025	Without extra functionality	-15/-23*	-18/-27	-22/-32			0.8
077B2020	With signal contact, cutting in on rising temperature	-15/-23*	-18/-27	-22/-32	-12*		0.8
077B2077	With signal contact, cutting in on rising temperature (No. 6)	-10/-17*		-24/-34.7	-6*		2.0
077B3006	With signal contact, cutting in on rising temperature (No. 6)	-10/-17*		-24/-34.5	-6*		2.0

Upright freezers

077B0026	Without extra functionality	-17/-23	-20/-26	-23/-30			1.2
077B2021	With signal contact, cutting in on rising temperature	-17/-23	-20/-26	-23/-30	-14*		1.2

Two-temperature cabinets with automatic defrost

077B5021	With large differential and automatic defrost	+9/-12	+5.5/-19	+2/-25*			1.0
077B5221	With large differential, automatic defrost and auxiliary contact	+9/-12	+5.5/-19	+2/-25*			1.0
077B6020	With constant out-in temperature and automatic defrost	+3.5/-10	+3.5/-15	+3.5/-20*			1.0
077B6208	With constant cut-in temp., automatic defrost and auxiliary contact (No. 3)	+3.5/-11		+3.5/-27*			1.2
077B6220	With constant cut-in temp. and automatic defrost	+3.5/-10	+3.5/-15	+3.5/-20*			1.0
077B6021	With constant cut-in temperature, automatic defrost and auxiliary contact	+3.5/-12.5	+3.5/-17.5	+3.5/-23*			1.0
077B6221	With constant cut-in temp. and automatic defrost and auxiliary contact	+3.5/-12.5	+3.5/-17.5	+3.5/-23*			1.0
077B6022	With constant cut-in temp., automatic defrost	+3.5/-15	+3.5/-20.5	+3.5/-26*			1.0
077B6222	With constant cut-in temp., automatic defrost and auxiliary contact	+3.5/-15	+3.5/-20.5	+3.5/-26*			1.0
077B6476	With constant cut-in temp., automatic defrost and auxiliary contact (No. 3)	+3.5/-11		+3.5/-27*			2.0
077B6725	With constant cut-in temp., automatic defrost and auxiliary contact (No. 3)	+5/-11		+5/-27*			2.0

Liquid coolers

077B0027	Without extra functionality	+15.5/+9*	+12/+5	+8/+0.5*			1.2
----------	-----------------------------	-----------	--------	----------	--	--	-----

Bottle coolers

077B0028	Without extra functionality	+10.5/+5	0/-7*	+3.0/-4.5			1.2
077B0155	Without extra functionality (No. 8)	+10.9/+5.2		-1/-8.5*			2.0

Absorption coolers

077B0220	With auxiliary contact (No. 4)	+3.5/-1*	-2/-7	-7/-12.5			1.2
----------	--------------------------------	----------	-------	----------	--	--	-----

Ice cream freezer

077B0102	Without extra functionality (No. 5)	-7.5/-15*		-22/-33.1			2.0
----------	-------------------------------------	-----------	--	-----------	--	--	-----

* Adjustment position



Vision

We want to be a significant leading global provider of cold controls and cold control solutions for the appliance industry, and therefore contribute to the success of our customers.

We will be respected in our environment, and among our owners, customers and employees, for what we do, and how we do it.

We will be a highly efficient and lean organization generating maximum profits through economics of scale and sublime quality products.

Mission

Our Mission is to be the worlds premier provider of cold controls, cold control solutions and services within the business area household and light commercial appliances, offered to the global market of OEM's and wholesalers, in order to fulfil their needs for components, solutions and added value.

Our competitiveness is based on world class quality, knowledge, customer service and support.

We will work according to our Citizenship Principles in such a manner to be recognized as the most respected, safe and reliable manufacture of cold controls in the world.

To support our mission, we are guided by our commitment to continuously value enhancement, policies, principles, and beliefs that guide our work every day.